


# Agrowseeder Calibration Chart


These charts are provided as a **guide only**.  
Always check the application rate using  
the Calibration Procedure as outlined in  
the Agrowdrill Operator's Manual.

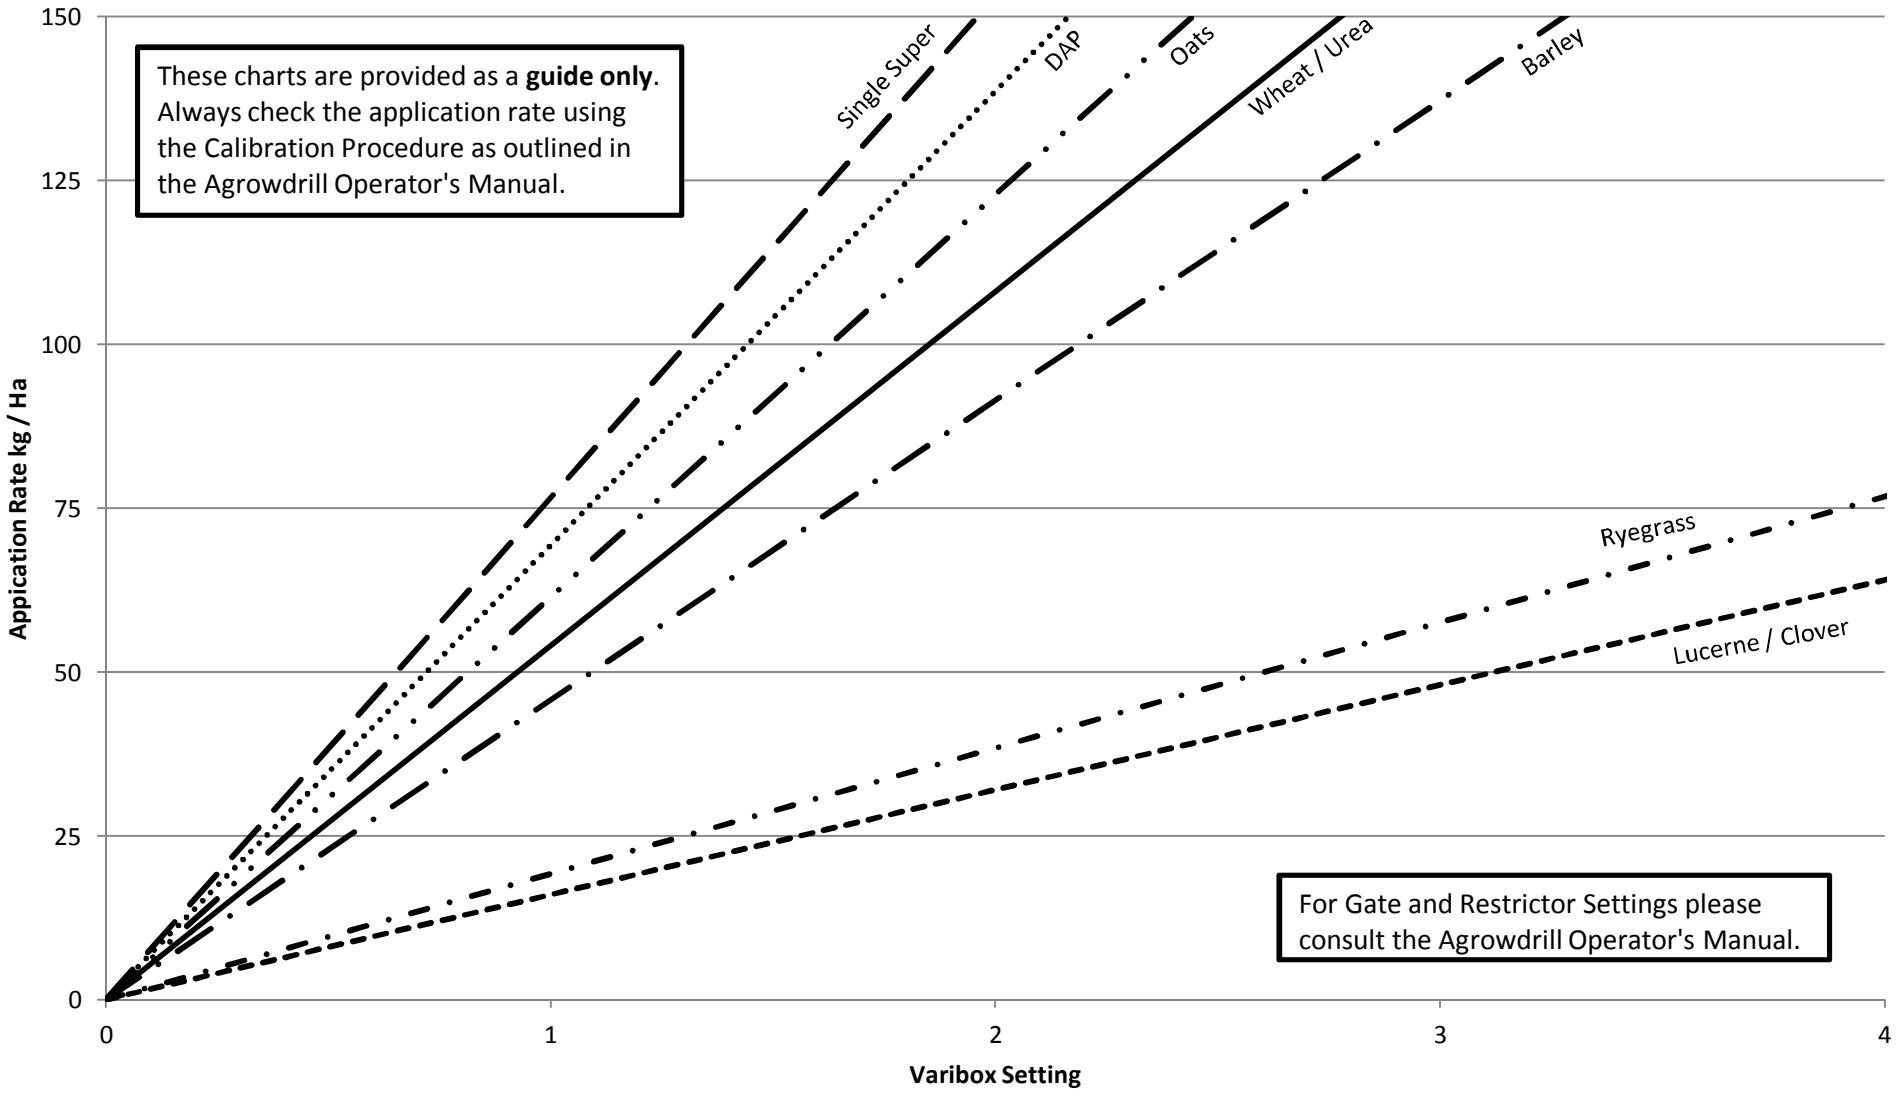

For Gate and Restrictor Settings please  
consult the Agrowdrill Operator's Manual.

# AD 120 & AD 320 Series Agrowdrill Calibration Chart


These charts are provided as a **guide only**.  
Always check the application rate using  
the Calibration Procedure as outlined in  
the Agrowdrill Operator's Manual.

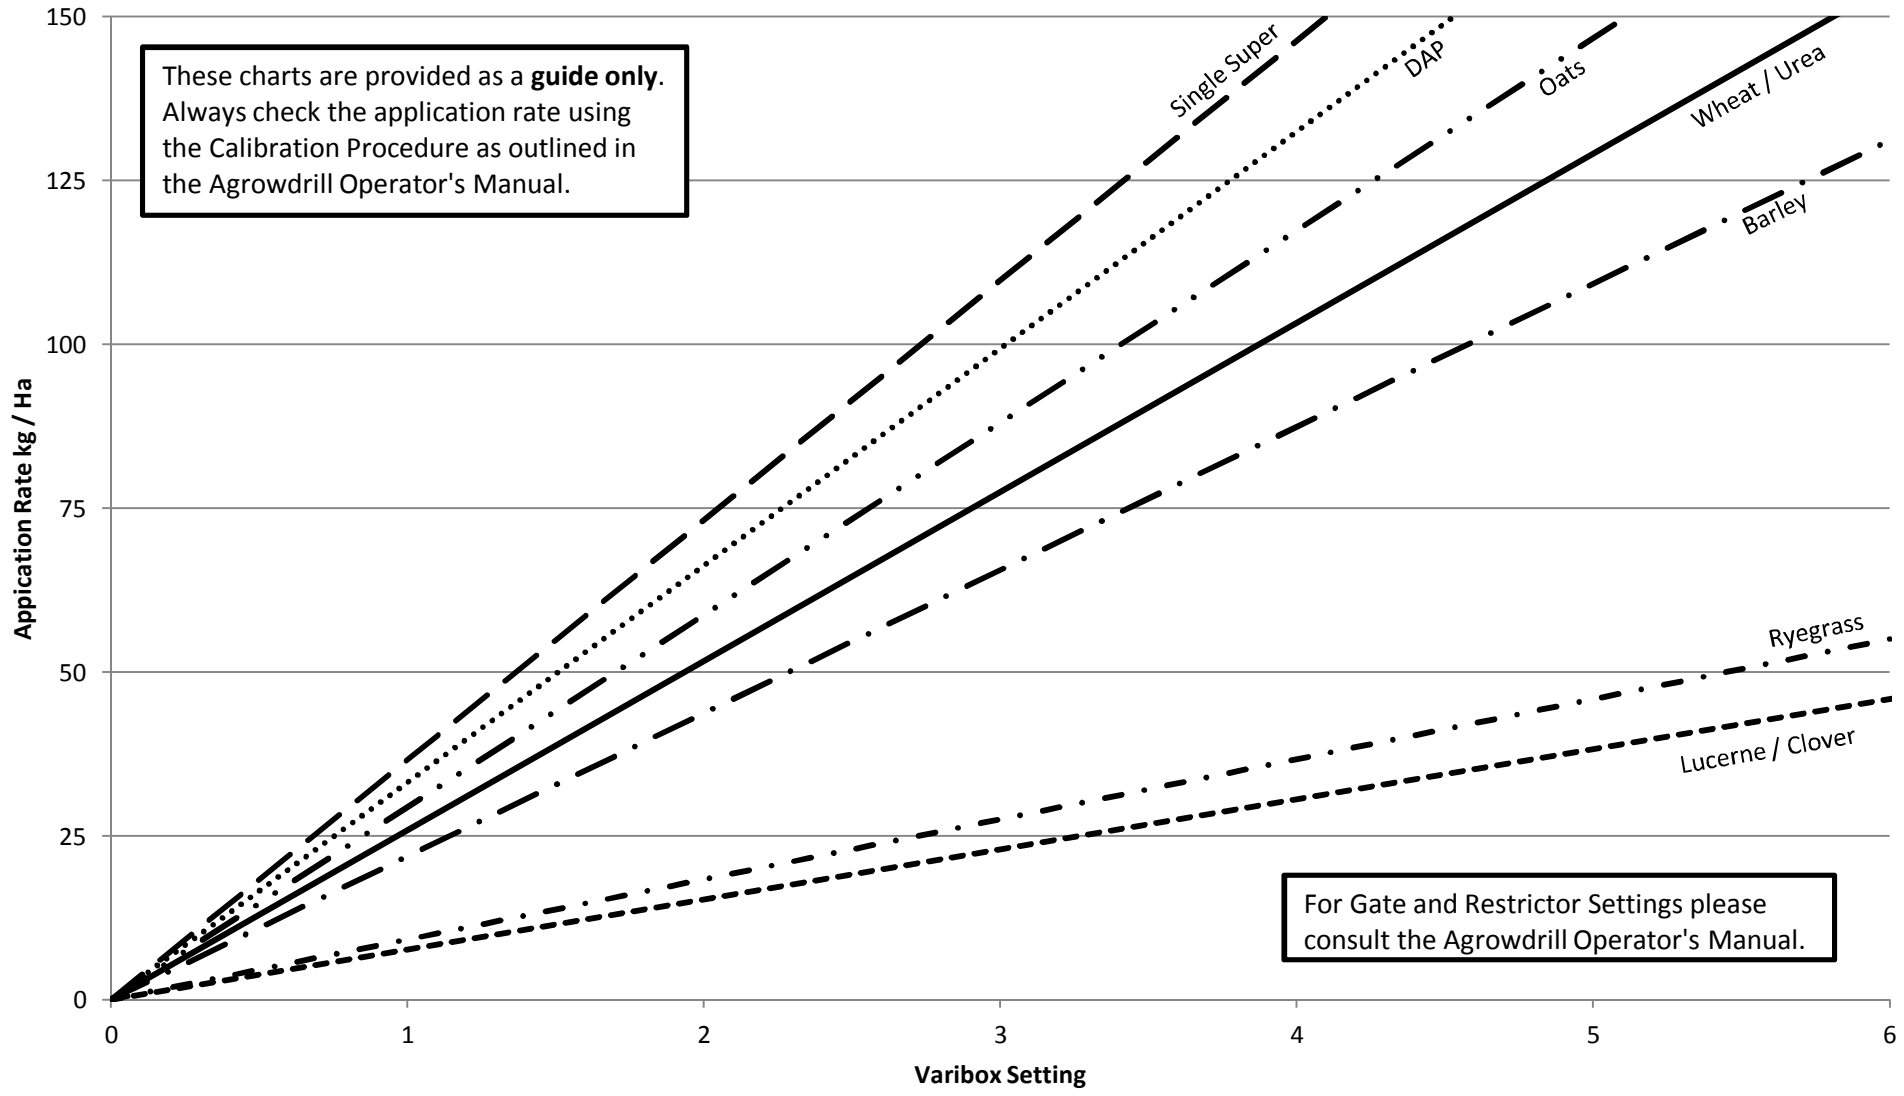

For Gate and Restrictor Settings please  
consult the Agrowdrill Operator's Manual.

# AD 520 & AD 720 Series Agrowdrill Calibration Chart


These charts are provided as a **guide only**.  
Always check the application rate using  
the Calibration Procedure as outlined in  
the Agrowdrill Operator's Manual.

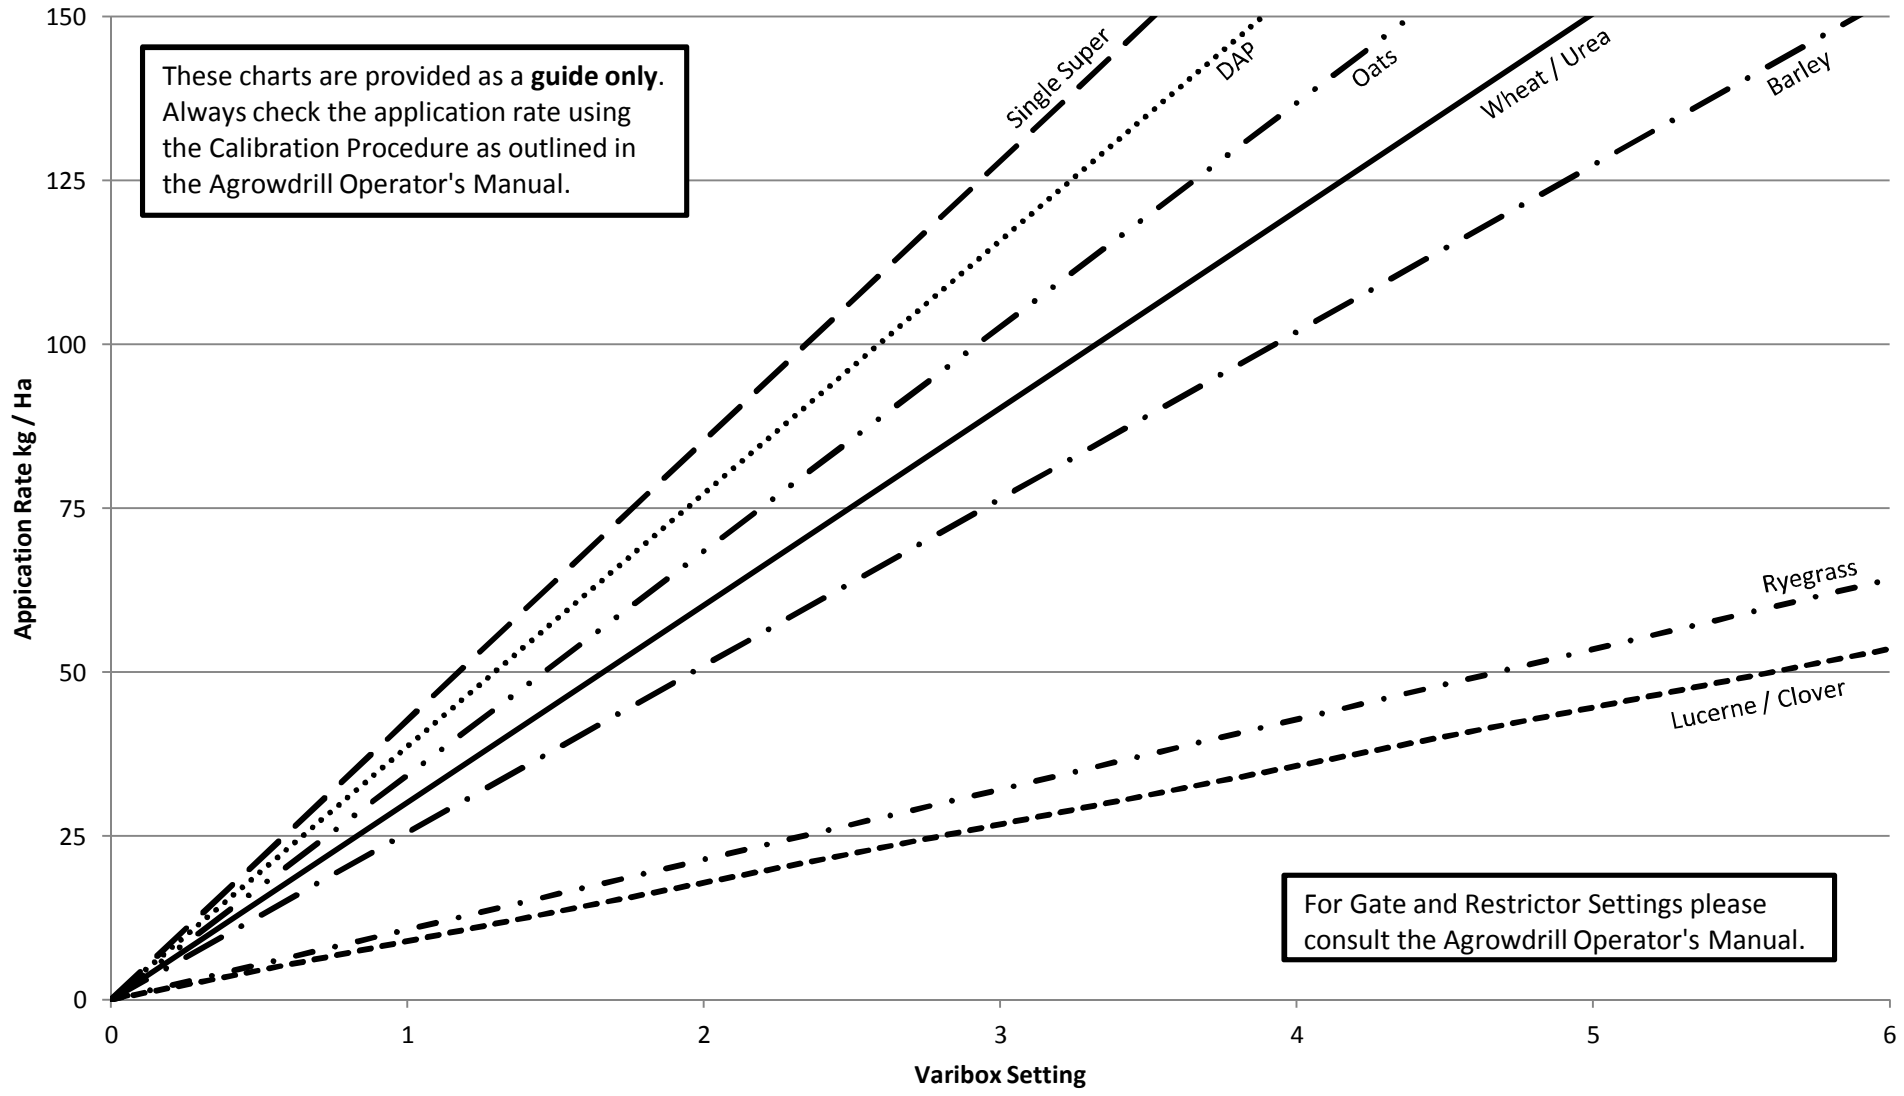

For Gate and Restrictor Settings please  
consult the Agrowdrill Operator's Manual.

# AD 820 Series Agrowdrill Calibration Chart

These charts are provided as a **guide only**.  
Always check the application rate using  
the Calibration Procedure as outlined in  
the Agrowdrill Operator's Manual.

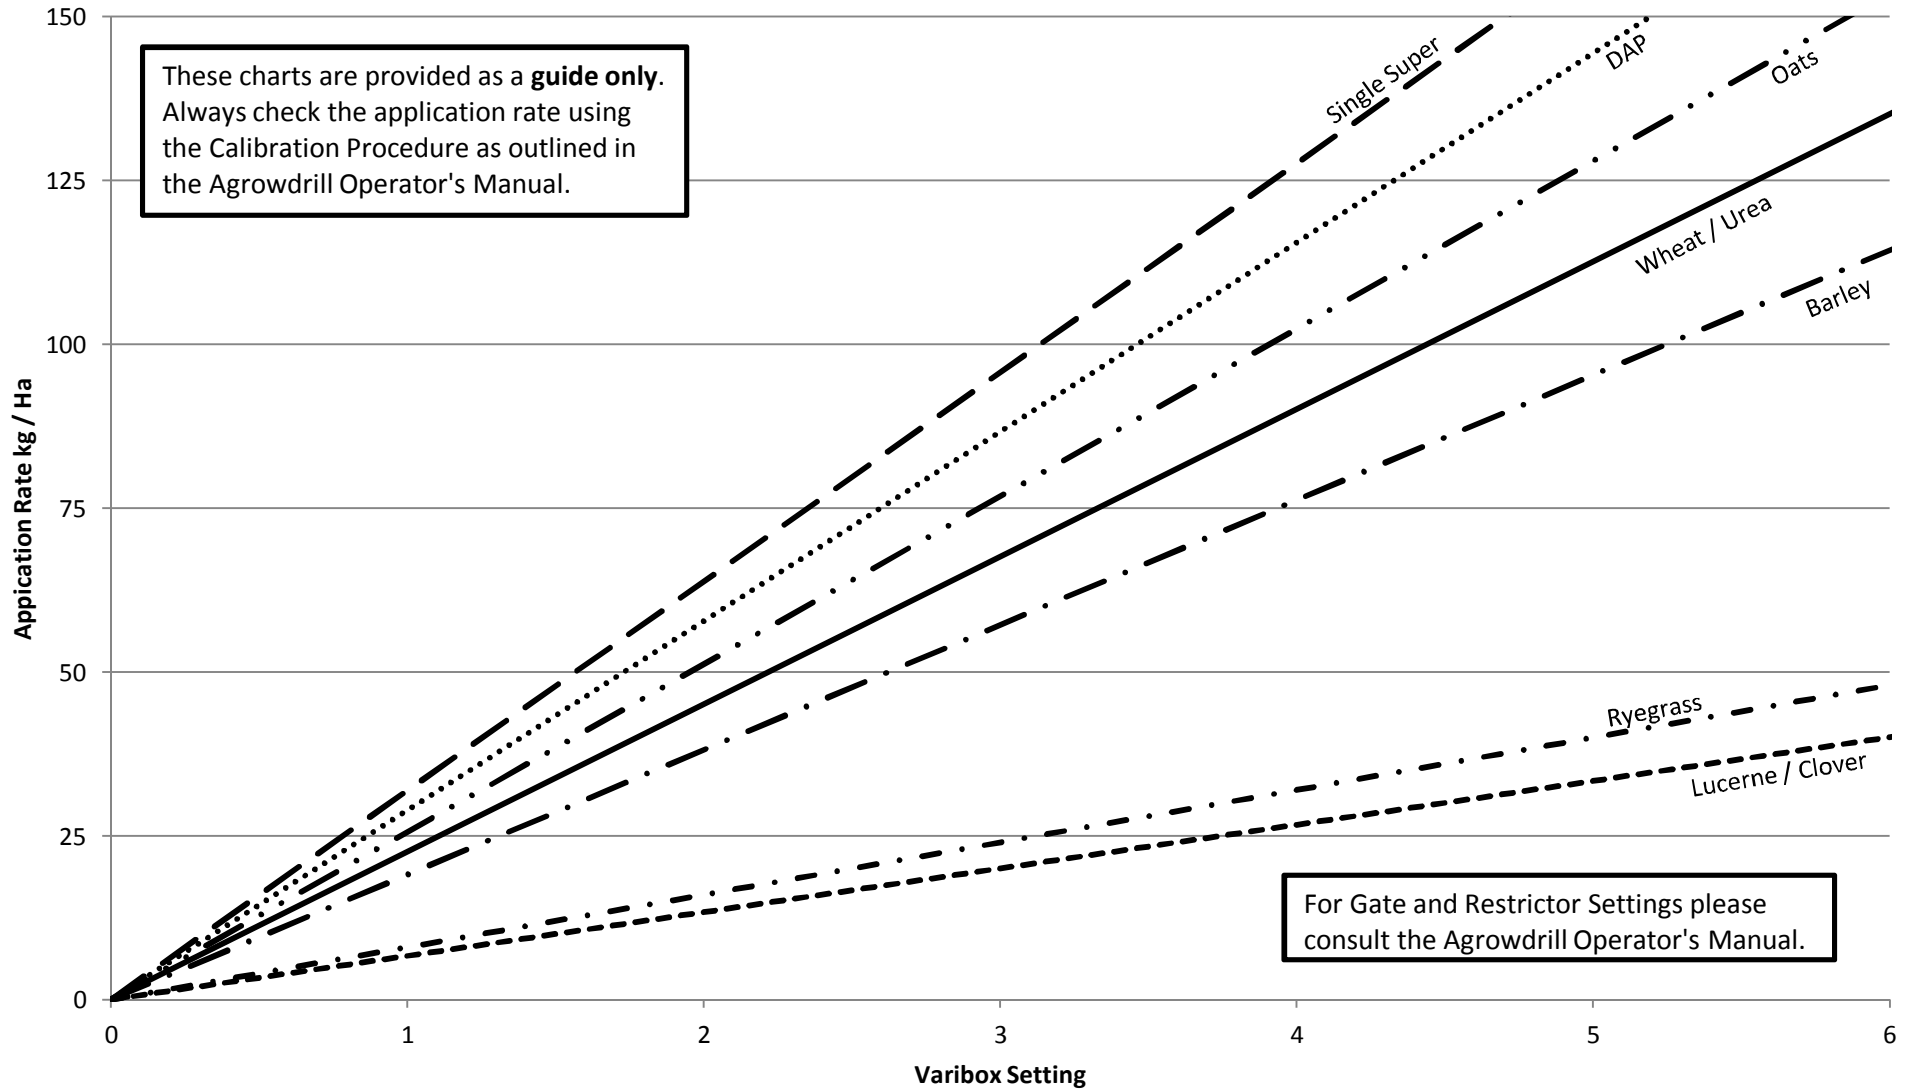

For Gate and Restrictor Settings please  
consult the Agrowdrill Operator's Manual.